

# Silverlink 600 Electric Range Oven ESLR9C

## OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.



Before first use, burn off the protective coating on the hotplates by heating them on maximum for 3-5 minutes without a pan.

### Hob operation

Switch on the mains supply – the green neon will illuminate.

Turn the relevant control knob to the required setting.

Each plate incorporates a protection device that automatically reduces the power when the pan is removed or if a pan boils dry.

### Oven operation

Switch on the mains supply – the green neon will illuminate.

Set the oven control knob (LH side) to the desired temperature – the amber neon will illuminate.

The amber neon will extinguish when the set temperature is reached, and then operate as the element cycles.

Allow 20 minutes from cold for the oven to heat and stabilise.

This appliance has had the airflow optimised for the most even cooking on the second and fourth shelf positions using either 2 x 1/1 gastronorm containers or 4 x 1/2 gastronorm containers.

### Safety thermostat

This appliance is fitted with a safety thermostat to protect the oven from overheating. If the oven is not heating, try resetting the safety thermostat by pressing the red button located above the cable inlet on the rear panel. The oven must be cool before the reset can be activated.

## CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

The oven is fitted with a removable liner base to assist cleaning.